

Baby scale User Manual

BW-0365



www.liden-weighing.com

SPECIFICATIONS

Model	BW-0365
Max capacity	15kg
Graduation	2/5g
Accuracy	OIML Klass III
Tara-range	-15 kg
Min. load	40/g

Specifications	
Display	23 mm high, 5 segment, LCD-display with backlight. Graphic display of BMI
Construction	ABS-plastic (indicator)
Platform size	600 x 300 mm
Height	160 mm
stabilization time	3 Sec. standard
Working temperatur	0°C - 40°C / 32°F - 104°F
Powersupply	5V/1000mA AC adapter and Battery 6xAA
Eu-verified according to 2014/31/EU	Class III
MDD-approved according to 93/42/EEC	Class I

Before use

Power Supply

Supply voltage: AC230V/5V 1000mA



Environmental:

Operation Temperature: -10°C ~ 40°C

Notice on using


1. Avoid speed temperature influence or windy or direct sunshine and wet.
2. Please must connect with ground wire and don't share same power together with power control systems.
3. Load cells output signals provide only week voltage and this device's cable sometimes is easily interfered by pulsed, for this reason please separate with pulsed.
4. Every input/out cable is better to use with shield and connect to ground.
5. Load cell and signal cable have to kept dry because the device of display becomes unstable at wet place.

Backlight selection

1. No backlight: Press  lasting 3 seconds, it displays "OFF"
2. Auto backlight: Press  lasting 3 seconds, it displays "ON"
Backlight function will be active while loading.


Replace battery:

1. Turn the scale over and lift-off the battery cover.
2. Insert new AA batteries (no rechargeable) and make sure the polarity is correct.
3. Close the battery cover.

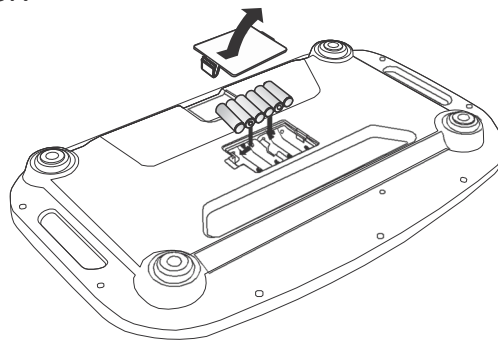

Instructions for use

Front panel

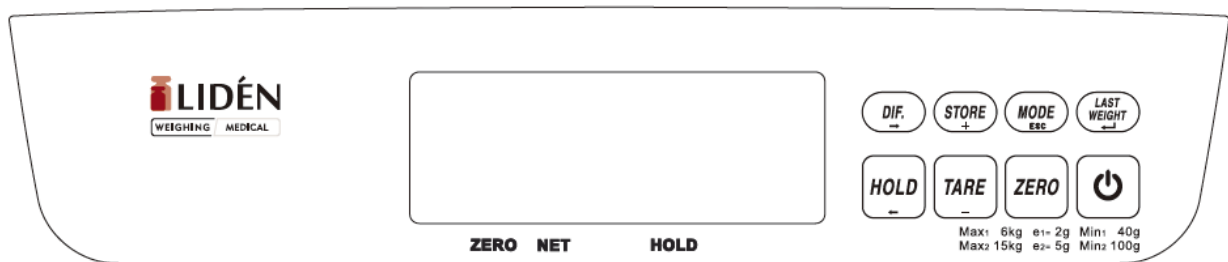

Keypad function



press to turn the scale on or off.

- Power on: press briefly.
- Power off: hold down lasting 2 second and it displays OFF.

HOLD



in zero mode, hold down this key to select Auto or Manual Hold mode.


- Auto Hold mode:
The scale will auto hold after the weight is stable.
- Manual Hold mode:
After the weight is stable, press this key to hold.
- Hold again after weighing lock:

The weight is stable and lock. Press  to release hold function and hold again.

TARE





TARE function

- Place the empty container on the scale, press  key briefly to deduct the weight of the container. The display will show negative value after remove the empty container.


- Press  or  to cancel this function.

Pre-tare function



- Pre-tare function (HOLD down  lasting 3 seconds)

In zero mode, hold down this key lasting 3 seconds, key in the known weight and press  key. The screen displays the negative weight after

pre-taring. Press  or  to cancel this function.

- b. While loading, press  and it will display pre-tare value lasting 3 seconds.

ZERO





- a. Press this key to adjust zero range (<+/-2%).
 b. When the slide down switch on position and screen shows ZERO, hold down this key lasting 3 seconds and it will display high resolution value. Press  to leave this mode.
 c. Turn on the power and then press  key and then you will see the software version. Release this key and it will back to weighing mode.




MODE ESC

- a. In ZERO mode, press this key briefly to enter multi-range mode |1| |2| auto
 c. In ZERO mode, hold down this key to change unit weight(kg/lb or g/oz)

STORE +




Store weight value (press briefly)

Place baby on the platform and it will hold the baby's weight after weigh stable. Hold down this key lasting 3 seconds, it will display  and use   to key in the storage position (1-99). Press  to select (1) or (2).





- (1) Press  to leave or wait for 10 seconds to auto back weighing mode.
 (2) Use  key to clear storage value. After clearing, it will display next memory position. You could go on to clear or press  to leave.

DIF. →

Weigh difference

Place baby on the platform and it will hold the baby's weight after weighing stable. Press this key, it will display  and use  to key in the storage position (1-99). Press  to display the different value. Remove the baby and the screen will back to weighing mode after 3 seconds.

Recall DIF.:

Press this key briefly and display  and use   to key in (desired memory position (1-99), press  to display DIF. value. Then back to weighing mode after 3 seconds.

LAST WEIGHT ←

In zero mode, press this key briefly to display previous reading.